



AIR CONDITIONER
REMOTE CONTROL ILLUSTRATION

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.


Thank you very much for purchasing our air conditioner.
Please read this owner's manual carefully before using
your air conditioner.

CONTENTS

Remote Control Specifications.....	2
Function buttons	3
Handling the remote control	4
Remote LCD screen indicators	5
How to use the basic functions.....	6
How to use the advanced functions	13

Remote Control Specifications

Model	RG57H(B)/BGE
Rated Voltage	3.0V(Dry batteries R03/LR03×2)
Signal Receiving Range	26FT
Environment	23°F~140°F

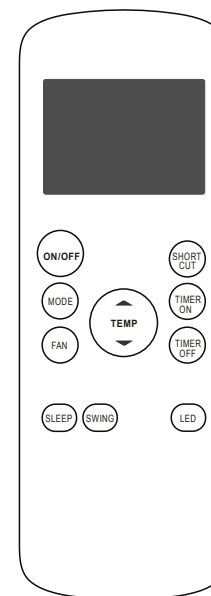

RG57H(B)/BGE

